


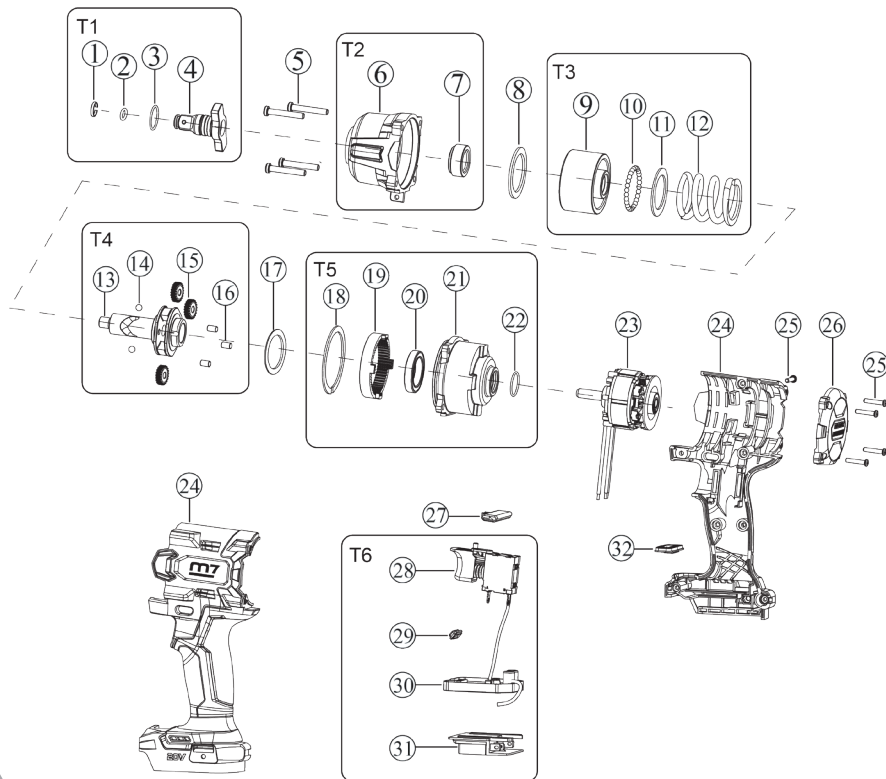

Cordless Impact Wrench

Item No : DW - C401

● The consumable parts ▲ The replacement parts ★ The non-replacement parts



Part List DW - C401

	NO.	INDEX NO.	DESCRIPTION	Q'TY
●	T1	DW-C401T1	1/2" Output shaft Ass'y (1,2,3,4)	1 SET
▲	T2	DW-C401T2	Gear box Ass'y (6,7)	1 SET
●	T3	DW-C401T3	Impact block Ass'y (9,10,11,12)	1 SET
▲	T4	DW-C401T4	Center shaft Ass'y (13,14,15,16)	1 SET
▲	T5	DW-C401T5	Rear gear box Ass'y (18,19,20,21,22)	1 SET
●	T6	DW-C401T6	Brushless controller Ass'y (28,29,30,31)	1 SET
★	5	DW-C401T05	ST5.0 x 33 stscrew (4 pcs)	1 SET
★	8	DW-C401P08	Washer\Ø45 x Ø34.2x2	1
★	17	DW-C401P17	Washer\Ø33 x Ø25.2x0.5	1
▲	23	DW-C401P23	Brushless MOTOR	1
★	24	DW-C401T24	DW-C401 housing (Left & Right)	1 SET
★	25	DW-C401T25	ST3.5 x 18 ST SCREW (9 pcs)	1 SET
★	26	DW-C401P26	Rear cover	1
★	27	DW-C401P27	The reversing push twist	1
▲	32	DW-C401P32	Shifting gear button	1